







Soportes

Supports
Suportes











	Código / Code	Modelo / Model	Posición / Position
	F-2010	Chevrolet C60 - 714 Dodge DP800 Sistema Frenarsa Chevrolet C350 Dodge D600 Reforma RG	Trasero - Izquierdo Rear - Left Traseiro - Esquerdo
	F-2011	Chevrolet C60 - 714 Dodge DP800 Sistema Frenarsa Chevrolet C350 Dodge D600 Reforma RG	Trasero - Derecho Rear - Right Traseiro - Direito
	F-2016	Mercedes Benz LO 1114 - OC/OF 1214 Sistema Frenarsa Mercedes Benz L 1112 - L 1114 - O 140 Reforma RG	Delantero - Izquierdo Front - Left Dianteiro - Esquerdo
	F-2015	Mercedes Benz LO 1114 - OC/OF 1214 Sistema Frenarsa Mercedes Benz L 1112 - L 1114 - O 140 Reforma RG	Delantero - Derecho Front - Right Dianteiro - Direito
	F-2012	Mercedes Benz L 1112 - L 1114 - O 140 L 1517 - L 1518 - O 170 Reformas RG	Trasero - Izquierdo Rear - Left Traseiro - Esquerdo
	F-2013	Mercedes Benz L 1112 - L 1114 - O 140 L 1517 - L 1518 - O 170 Reformas RG	Trasero - Derecho Rear - Right Traseiro - Direito

Soportes

Supports
Suportes

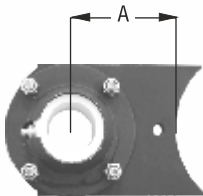

	Código / Code	Modelo / Model	Posición / Position
	F-2018	Mercedes Benz LO 1114 - OC/OF 1214 Sistema Frenarsa	Trasero - Izquierdo Rear - Left Traseiro - Esquerdo
	F-2410	Mercedes Benz LO 1114 - OC/OF 1214 Sistema Frenarsa	Trasero Rear Traseiro
	F-2028	Mercedes Benz L 608 - L 710 - LO 814 Reformas RG	Trasero - Izquierdo Rear - Left Traseiro - Esquerdo
	F-2029	Mercedes Benz L 608 - L 710 - LO 814 Reformas RG	Trasero - Derecho Rear - Right Traseiro - Direito
	F-2401	Remolques Trailers Reboques A= 86mm	
	F-2403	Remolques Agrícolas Agricultural Trailers Reboques Agrícolas A= 80mm	
	F-2405	Randon / Boero Buje 38mm	
	F-2406	Randon / Boero Buje 41mm	
	F-2409	Ejes Hendrickson KLL	
	F-2001	Remolques Trailers Reboques	
	F-2003	Remolques Trailers Reboques	